















ASSEMBLY INSTRUCTION


YY-F090

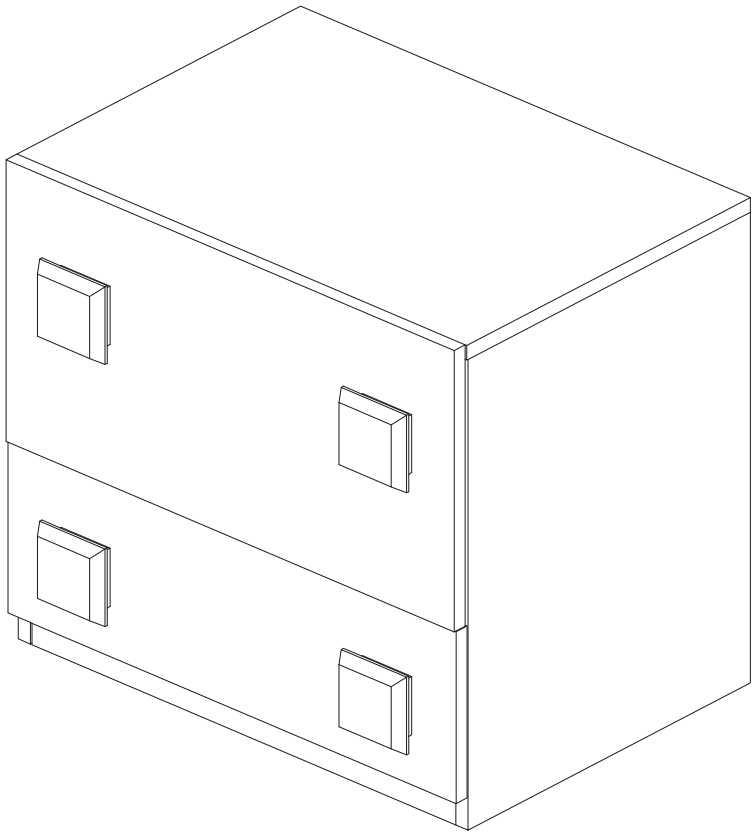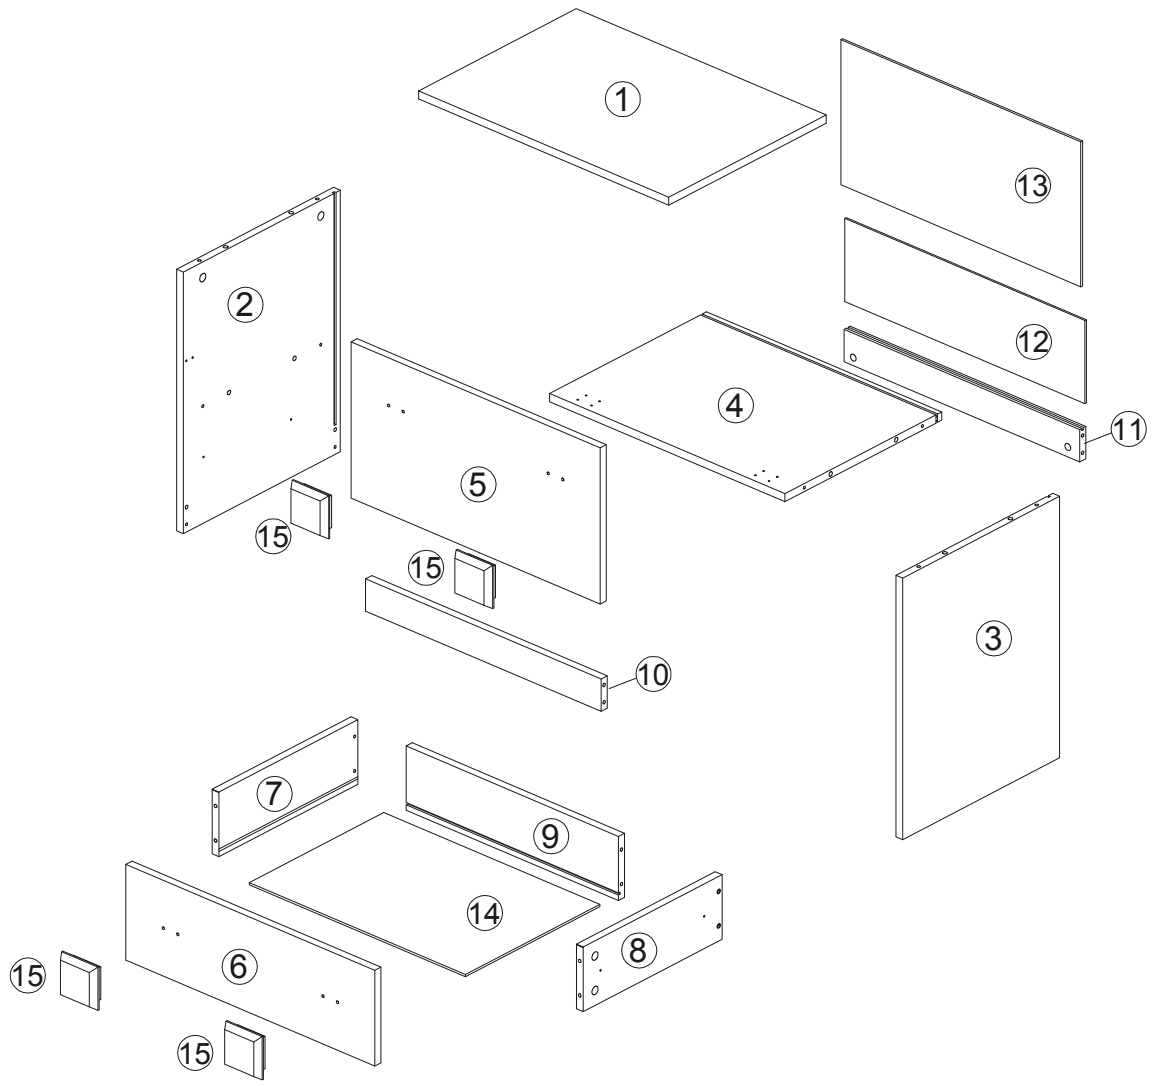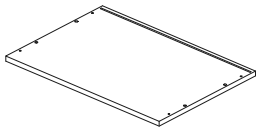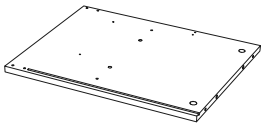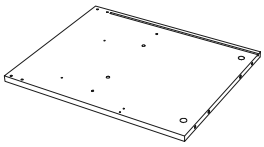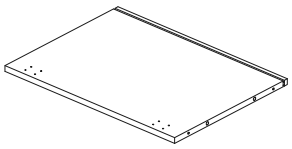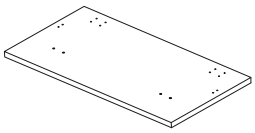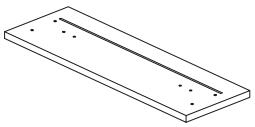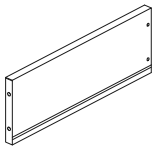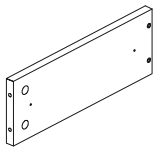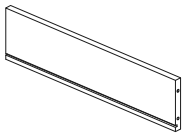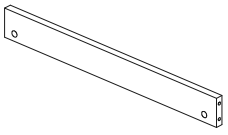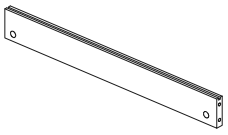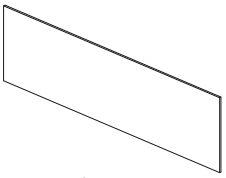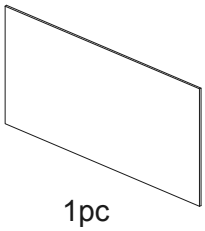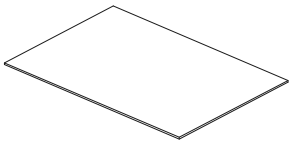


1
13
2
12
4
11
5
15
15
3
10
7
9
14
8
6
15
15










Parts List

1  1pc	2  1pc	3  1pc	4  1pc
5  1pc	6  1pc	7  1pc	8  1pc
9  1pc	10  1pc	11  1pc	12  1pc
13  1pc	14  1pc	15  4pcs	

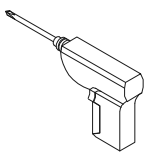


electric drill
(Not include)


Hardware List

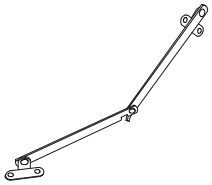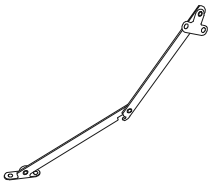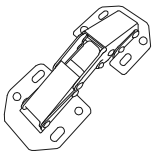A  Φ6*35mm 16pcs	B  Φ15*12mm 16pcs	C  Φ8*30mm 12pcs
D  M4*30mm 4pcs	E  M3.5*14mm 40pcs	F  6pcs
G  M4*22mm 8pcs	H  4pcs	I  1pc
J  1pc	K  1pc	L  2pcs
M  1pc	N  2pcs	


STEP 1:

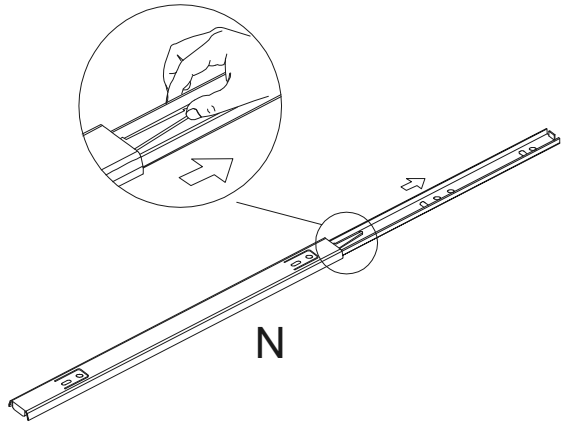



x2

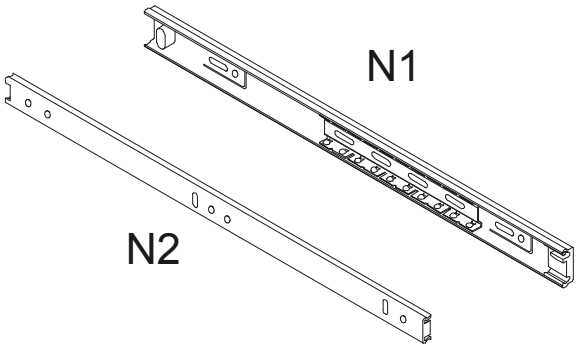


STEP 2:

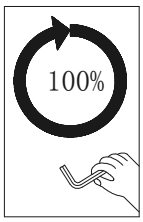

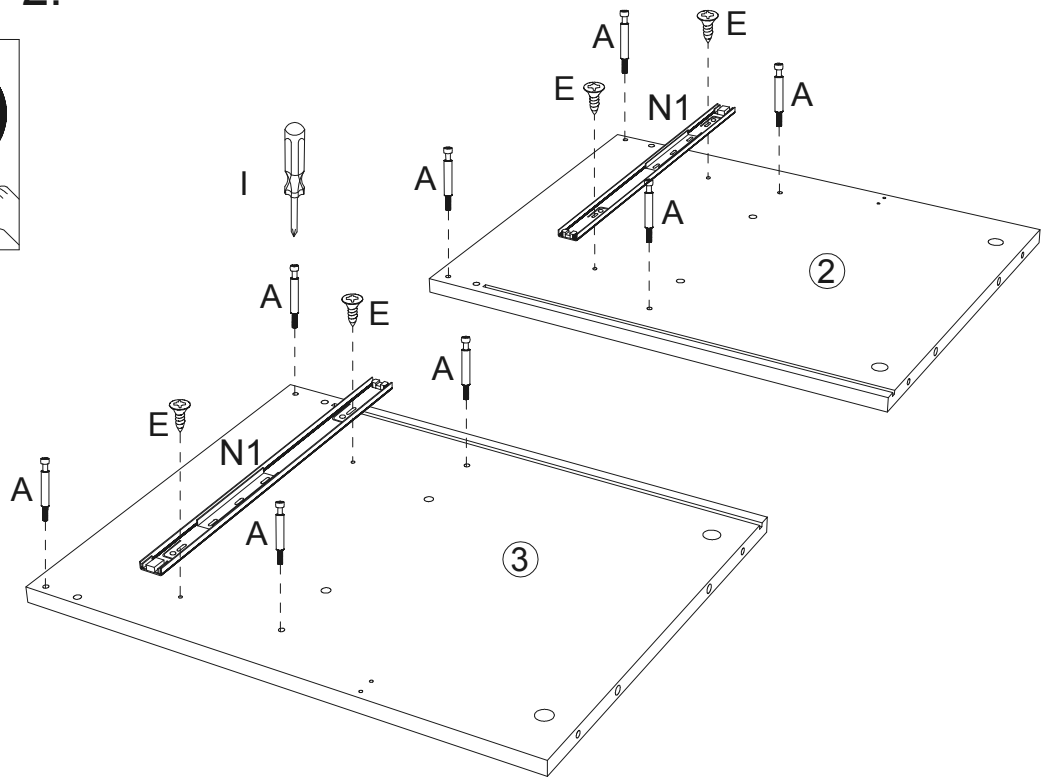

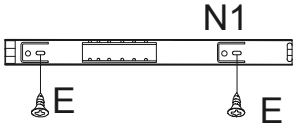

A

Φ6*35mm
8PCS


E


M3.5*14mm
4PCS


I


1PC

STEP 3:

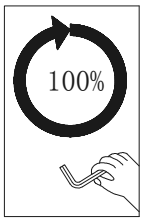


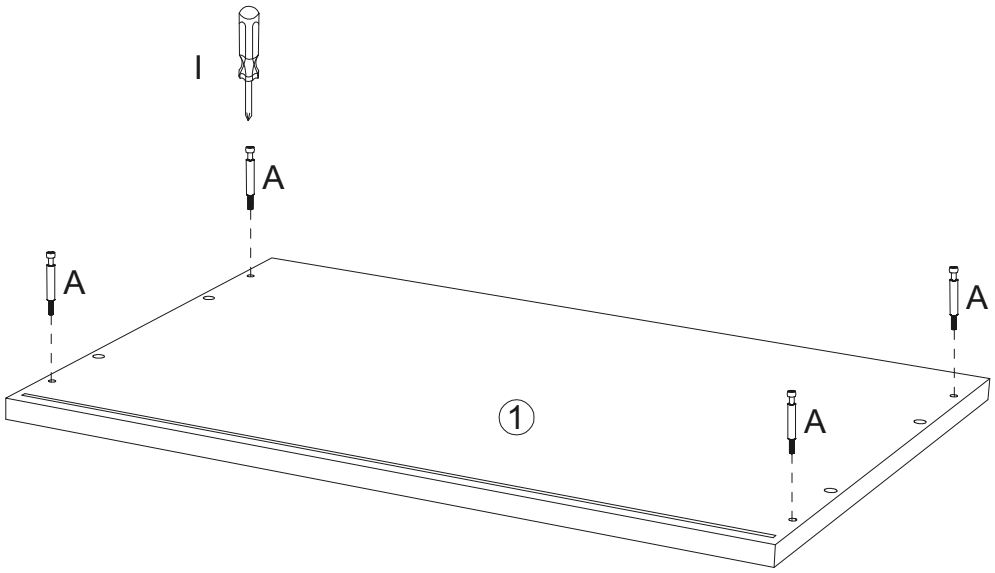



A

Φ6*35mm
4PCS


I

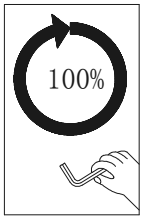1PC

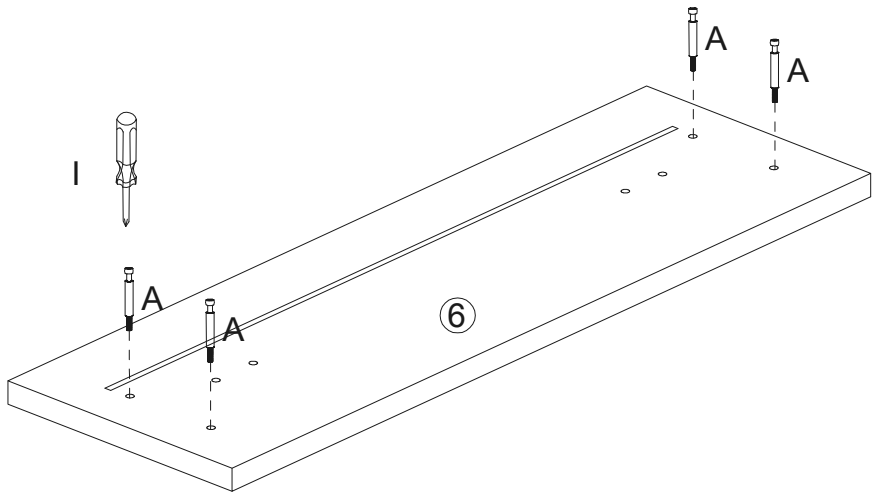STEP 4:






A

Φ6*35mm
4PCS


I

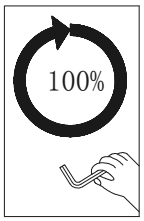1PC


STEP 5:




D

M4*30mm
4PCS

I

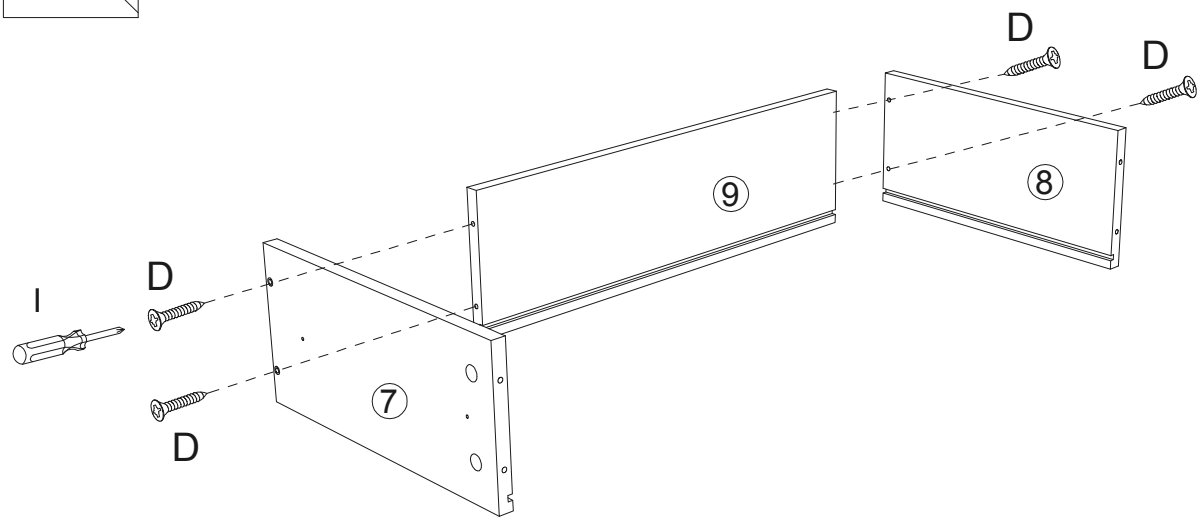1PC

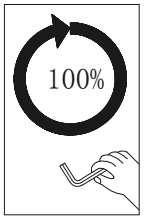



STEP 6:




B


Φ15*12mm
4PCS


I

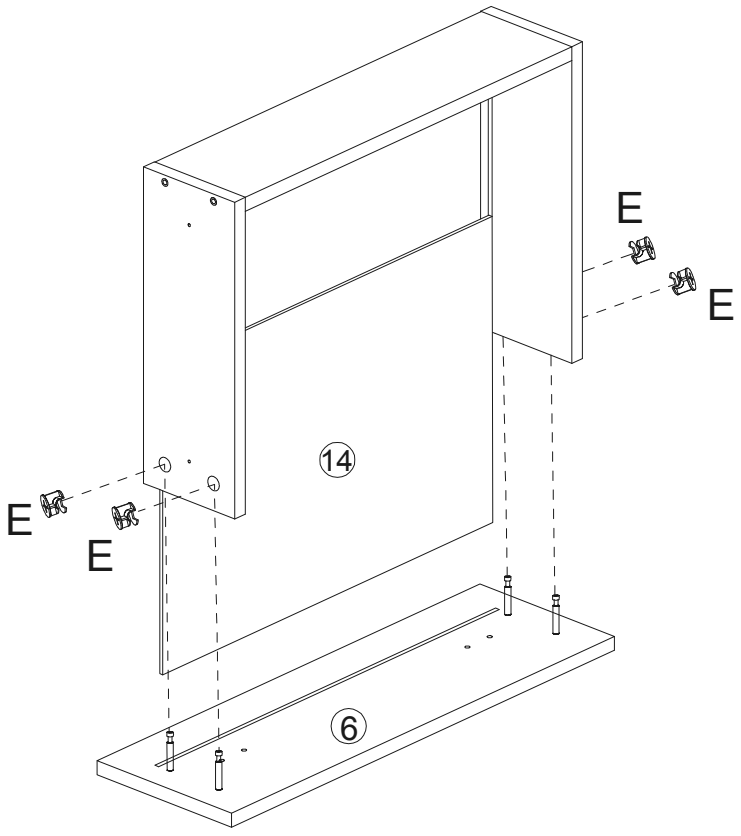1PC

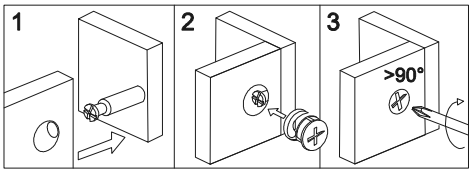


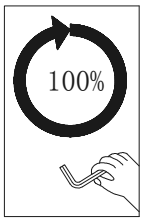

STEP 7:

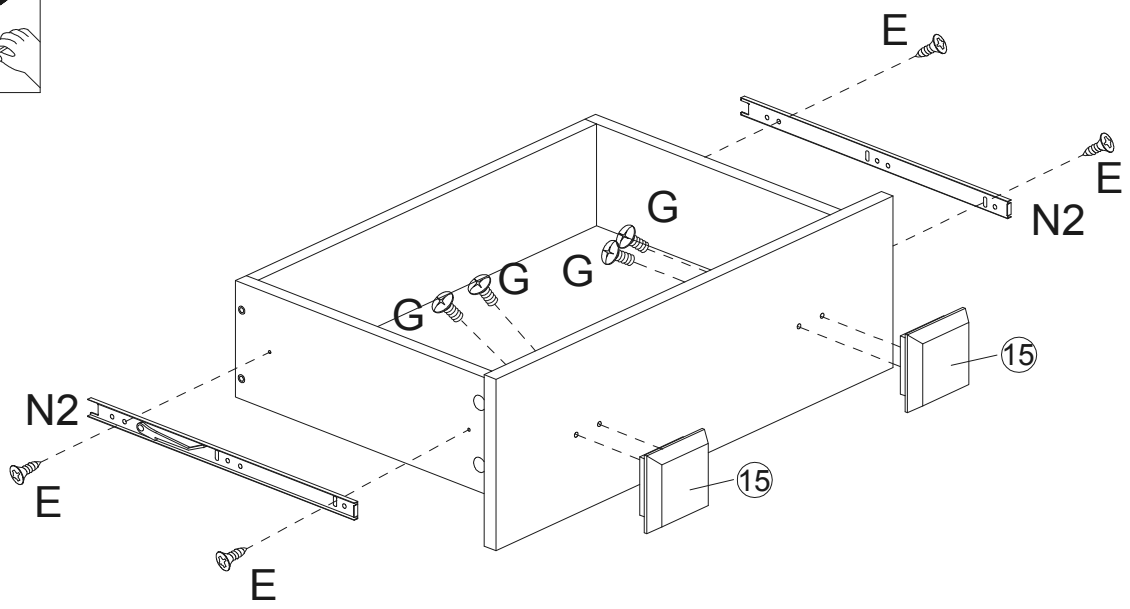



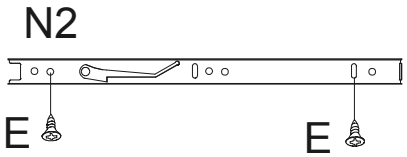

E

M3.5*14mm
4PCS


G


M4*22mm
4PCS


I

1PC

STEP 8:

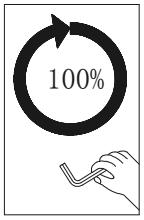

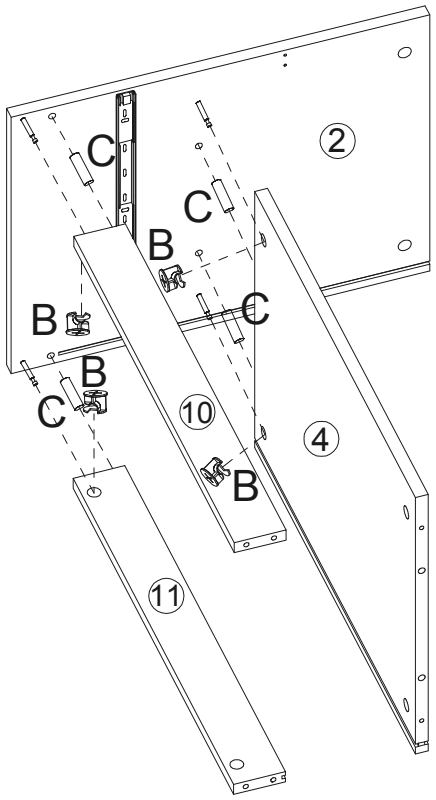

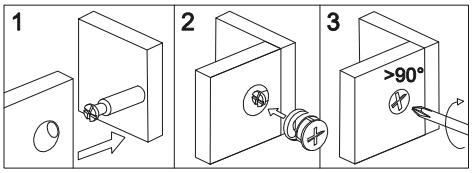


B


Φ15*12mm
4PCS


C


Φ8*30mm
4PCS

I

1PC

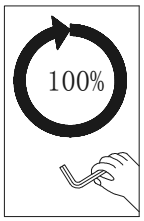STEP 9:

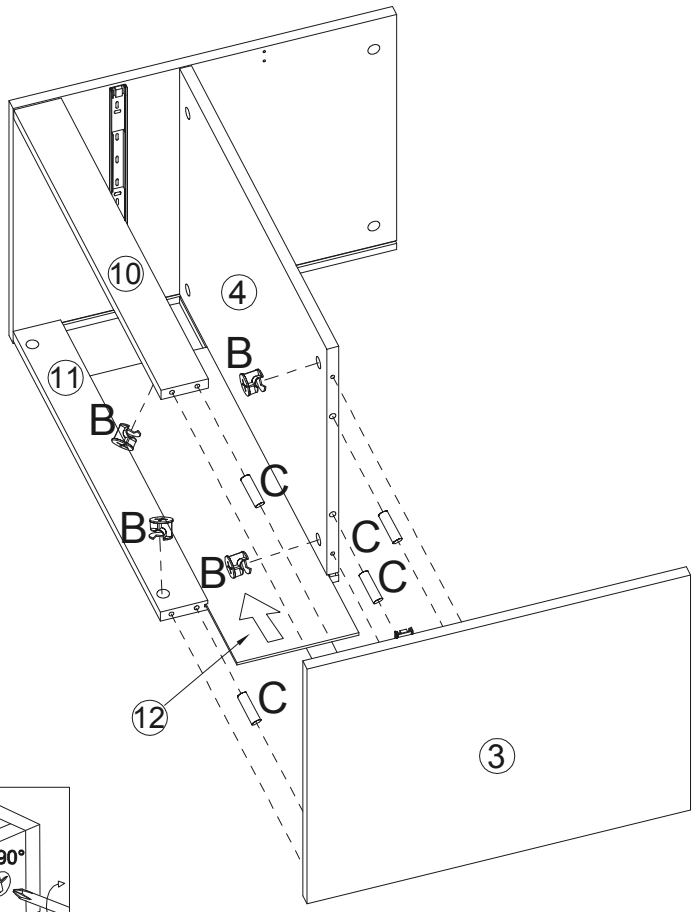

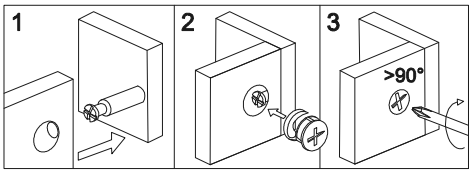



B

Φ15*12mm
4PCS


C


Φ8*30mm
4PCS


I

1PC

STEP 10:

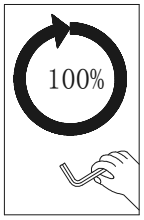

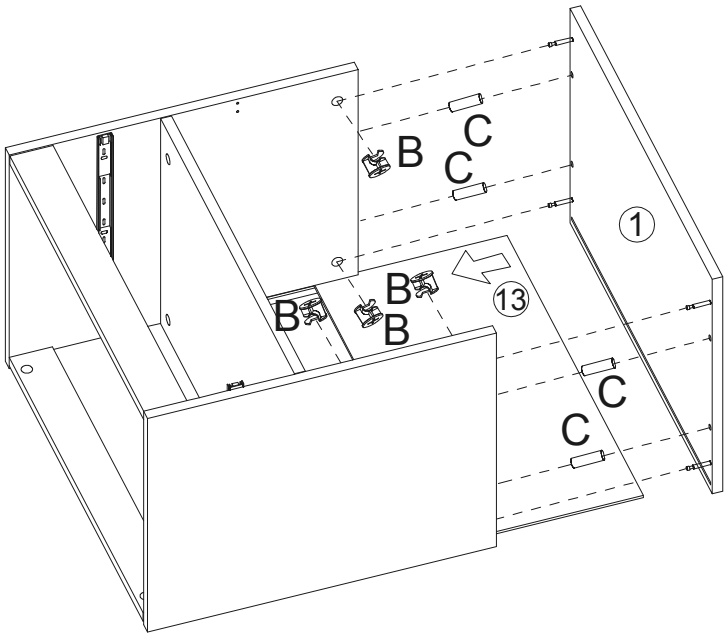

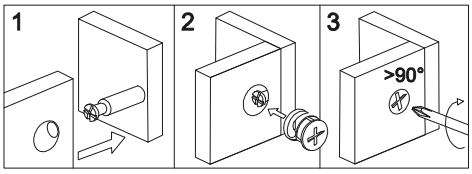

B

Φ15*12mm
4PCS


C


Φ8*30mm
4PCS

I

1PC

STEP 11:

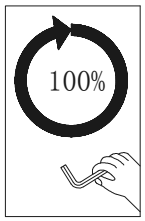

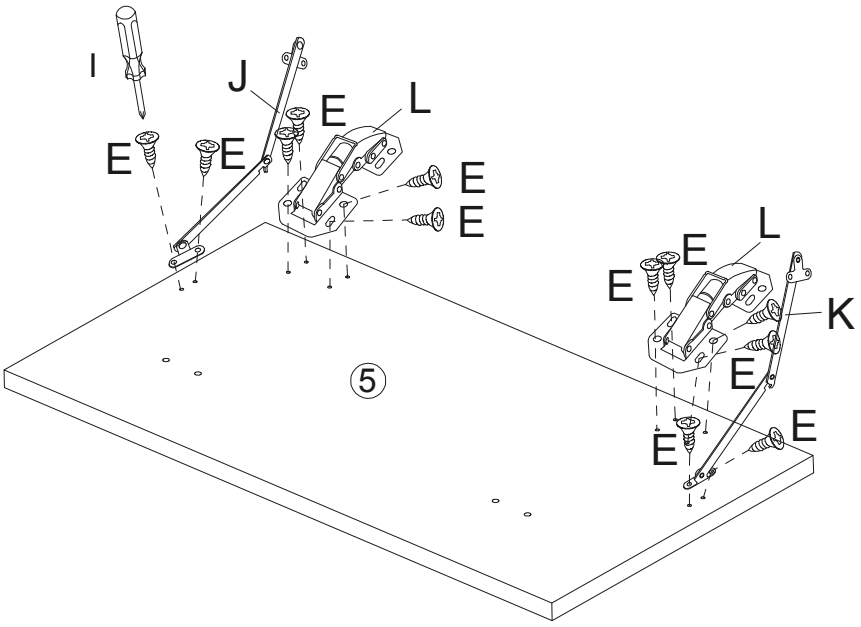

E

M3.5*14mm
12PCS

J

1PC

K


1PC


L

2PCS

I
1PC

STEP 12:

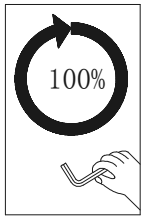

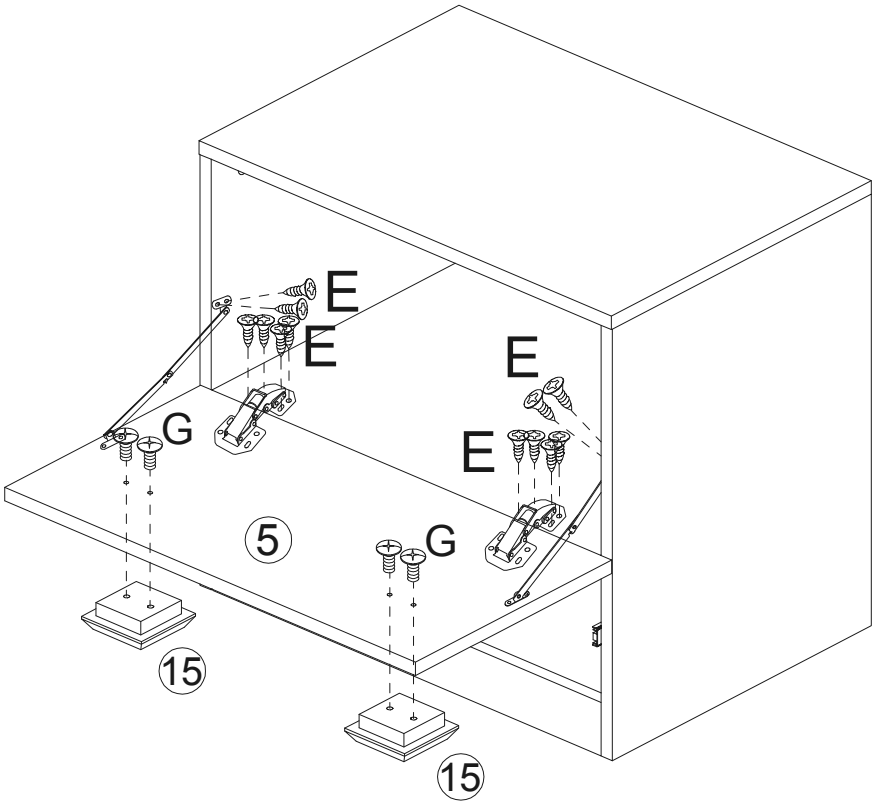

E


M3.5*14mm
12PCS


G


M4*22mm
4PCS

I
1PC


STEP 13:

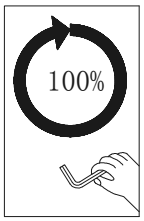


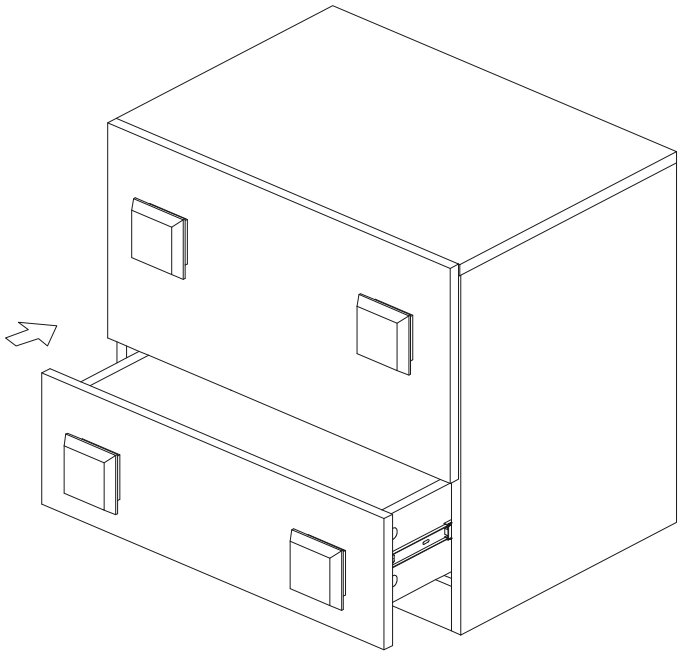

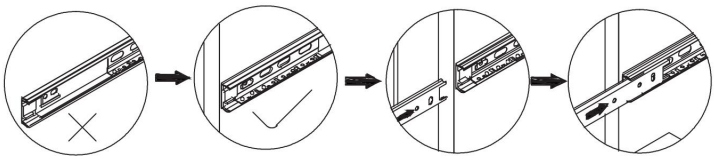

STEP 14:

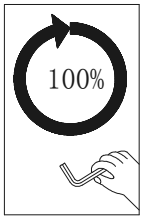

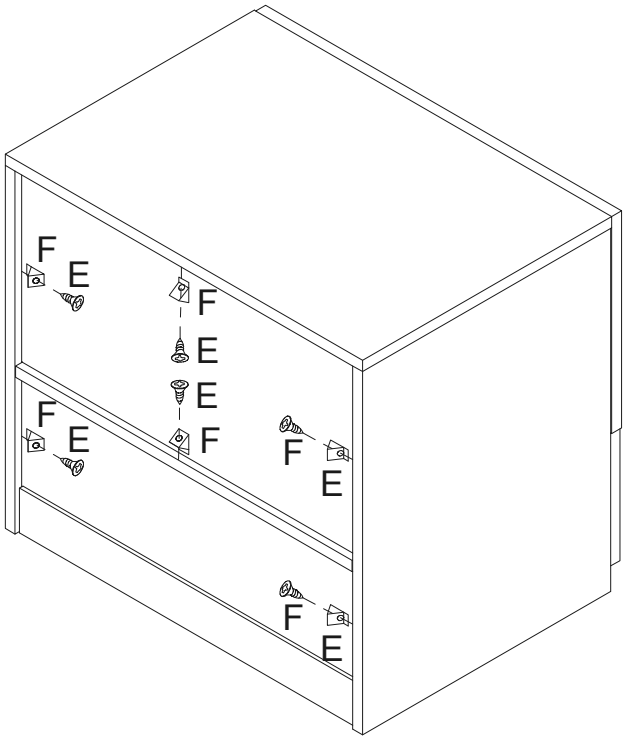

E


M3.5*14mm
6PCS


F

6PCS

I
1PC

STEP 15:

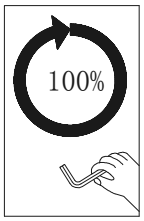


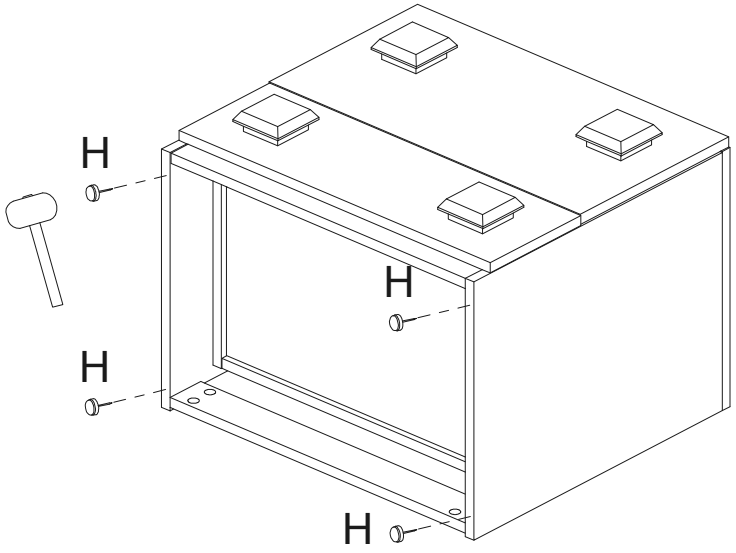


H

4PCS


If the cabinet is used in layers, the bottom needs H foot pad and other layers do not need used

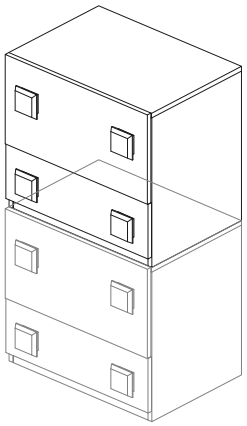



STEP 16:

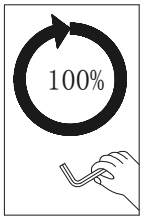


If you buy multiple cabinets to use in combination, use M accessories to connect them to ensure safety and not to move

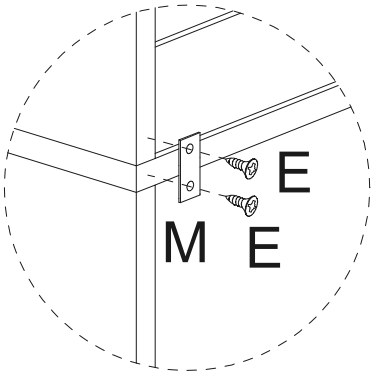

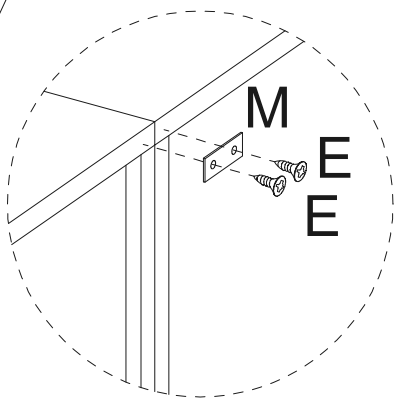

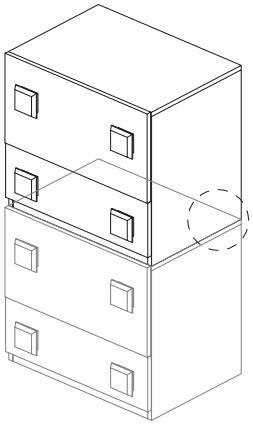

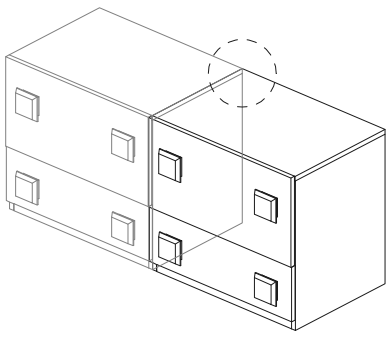


E

M3.5*14mm
2PCS

M

1PC

I

1PC